



GEO


WORKTOP with brackets

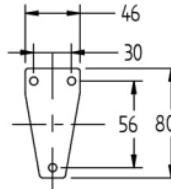


MOUNTING BRACKET

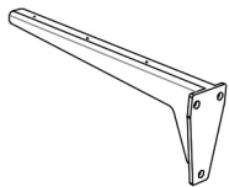


900 RECOMMENDED HEIGHT
TO TOP OF SELECTED BASIN

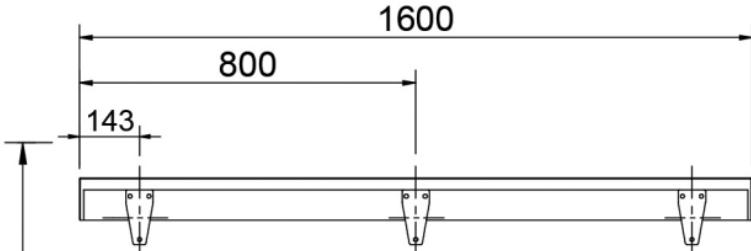

Rear View

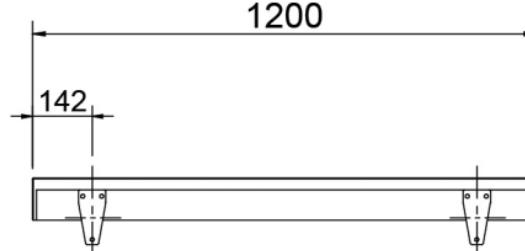

Rear View

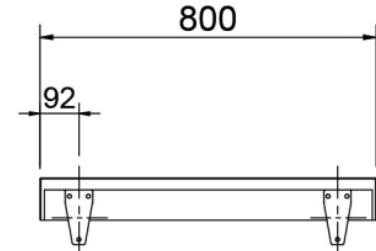

Rear View

Care & Maintenance.

- Ensure bathroom is well ventilated.
- Clean furniture with warm water or a PH neutral cleaner with a soft clean cloth.
- Do not use abrasive cloths.
- Under no circumstances should solvent cleaning agents (such as nitro-based thinners, acetone, nail polish remover or similar products be used).